



RedPost

www.theredpost.com | 118-2 East Washington Street, Goshen, IN 46528
phone/fax 877-REDPOST (733-7678) | info@theredpost.com

Congratulations! You're now the proud owner of your very own Goshen-Indiana-built-to-order, extruded aluminum, plasma-cut, lovingly-polished Sign.

Some information you should know:

- ➔ Warranty: Your Sign comes with a one year warranty. Full details are attached, but essentially, if you have a problem, contact us and we'll work with you to resolve it.
- ➔ Recycling: All components in your Sign are completely recyclable. The LCD panel does contain mercury and should not be put in the landfill (in fact, it's illegal in some states). To find the closest electronics recycling drop point, visit: <http://theredpost.com/recycle/>

Support:

- ➔ IM us on Google Talk or email us at support@theredpost.com
- ➔ Call toll free (877) 733-7678 ext. 2 or +1 (574) 971-4753 ext. 2 (local/int'l)
Monday - Friday, 9 am - 5 pm EST

To boot and configure your Sign for the first time:

1. Install the Wifi antenna (if you're using wifi) by screwing it onto the post on the back of your Sign
2. Plug the included USB flash drive into the back of the Sign (once everything's working, you can plug the drive inside the case, but for now, it's easier to just plug it in the back)
3. Plug a USB keyboard into the back of the Sign (not included unless purchased as an accessory)
4. Plug in the power cable.
5. Complete the simple configuration process (see page 3 of this document), using your keyboard's tab and return buttons to navigate between fields



If you are flush-mounting your Sign and ordered the optional Flush Mount Kit:


We recommend mounting your Sign with an 1/8" - 1/4" gap behind it to help with ventilation.

➔ Included with your Sign are:

- ➔ Hangman Products 6" hanging bar with built-in level: You can install this bar two ways:
 1. Install the 6" bar with level on the wall and hang your Sign on the bar using the slot at the top of the Sign as per the diagram.
 2. Screw the 6" bar without level on the back of the Sign, install the bar with level on the wall and then hang your Sign as per the diagram.

TIP: pop the included level bubble into the slot on the hanging bar

- ➔ Security T-screw and lock/unlock tool: To secure your Sign, first install the T-screw in the wall – make sure you measure the correct location for the T-screw so that when turned vertical, the T-screw will fit into the slot at the bottom of your Sign. Use the lock/unlock tool to turn the T-screw from horizontal to vertical, locking your Sign in place.
- ➔ 1' power cord: You must use a recessed electrical outlet to hide the cord and position the outlet such that the cord on the back of your Sign fits into the recessed outlet.
- ➔ Antenna: If your wifi signal is strong, you can simply unscrew the case screws on the back of your Sign, detach the antenna extension cable from the wifi card, and screw the antenna directly onto the card, inside the case. If your wifi signal is not strong, you'll need to place the antenna on the outside of the case either on the back (as shipped) or by drilling a 1/4" hole in the side of the case and moving the antenna extension cable to that hole.

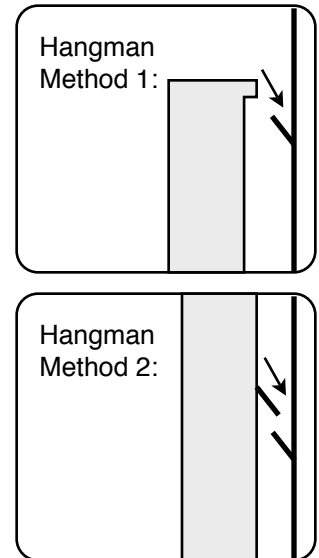

To download the latest version of Wicker, our customized version of Ubuntu that runs on every Sign:

- ➔ <http://sourceforge.net/projects/redpost>
- ➔ <http://launchpad.net/wicker/> (for bug reporting and documentation)

Thanks!

We welcome any suggestions, complaints, and ideas you have to improve our Sign.

RE-CONFIGURING YOUR SIGN

You have several options for how to use your Sign, detailed below. If at any point you want to go through the configuration process again, do one of the following:

- ➔ If you're using the local or RedPost options, press ctrl-alt-s
- ➔ If you're the URL option, plug in a mouse and keyboard to your Sign, right click and uncheck the "Full screen" option and then type the following into the URL bar in Firefox:
 - ➔ <http://localhost/setup.php>

ACCESSING UBUNTU

Your Sign is running a full version of Ubuntu, a variant of Linux. To access the full OS:

- ➔ Press ctrl-alt-f1 to get to the command line. There is no root password (type "sudo su" to become the root user). Press ctrl-alt-f7 to return to graphical mode.
- ➔ Plug a mouse and keyboard into your Sign, right click and uncheck the "Full screen" option.
 - ➔ You can then minimize Firefox and access the application menu by right clicking on the RedPost background image.
 - ➔ Right click within Firefox and check the "Full screen" option to return to full screen mode. You may have to type "<http://localhost/init.php>" into the URL bar to return to your previous configuration.

SIGN ISN'T BOOTING PROPERLY? RESET YOUR FLASH DRIVE

In rare cases, your flash drive may become corrupt causing the Sign to not boot properly. In such cases, you can quickly reset the flash drive and re-run the config process. When first booting, the screen shows a list of many languages. Hit the escape key at this screen and select the "reset" option on the menu and hit enter. The Sign will reset and reboot to the config process.

CONTENT SOURCES

RedPost: RedPost's web-based software allows you to create playlists of posters to play on your Sign. Think of it like iTunes, but for posters instead of music. If you'd like to use your RedPost account, you should first sign up at:

- ➔ <http://www.theredpost.com/register>

Local: to load images off the local flash drive (without needing an Internet connection), choose the Local option and load your images into the "redpost_images" directory on the Flash drive, which you can see when you plug the flash drive into a Windows PC.

URL: to have your Sign load a URL, choose the URL option and enter the URL.

REDPOST INC. LIMITED ONE YEAR WARRANTY

We warrant our hardware products against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser (Warranty Period). If a hardware defect arises and a valid claim is received within the Warranty Period, at its option, We will either (1) repair the hardware defect at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. We may request that you replace defective parts with new or refurbished user-installable parts that we provide in fulfillment of our warranty obligation. A replacement product or part, including a user-installable part that has been installed in accordance with instructions provided by Us, assumes the remaining warranty of the original product or ninety (90) days from the date of replacement or repair, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Our property. Parts provided by Us in fulfillment of its warranty obligation must be used in products for which warranty service is claimed. When a refund is given, the product for which the refund is provided must be returned to Us and becomes Our property.

EXCLUSIONS AND LIMITATIONS

This Limited Warranty applies only to products sold directly by Us. We do not warrant that the operation of the product will be uninterrupted or error-free. We are not responsible for damage arising from failure to follow instructions relating to the product's use.

This warranty does not apply: (a) to damage caused by accident, abuse, misuse, flood, fire, earthquake or other external causes; (b) to damage caused by operating the product outside the permitted or intended uses.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW, WE ARE NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOSS OF USE; LOSS OF REVENUE; LOSS OF ACTUAL OR ANTICIPATED PROFITS (INCLUDING LOSS OF PROFITS ON CONTRACTS); LOSS OF THE USE OF MONEY; LOSS OF ANTICIPATED SAVINGS; LOSS OF BUSINESS; LOSS OF OPPORTUNITY; LOSS OF GOODWILL; LOSS OF REPUTATION; LOSS OF, DAMAGE TO OR CORRUPTION OF DATA; OR ANY INDIRECT OR CONSEQUENTIAL LOSS OR DAMAGE HOWSOEVER CAUSED INCLUDING THE REPLACEMENT OF EQUIPMENT AND PROPERTY, ANY COSTS OF RECOVERING, PROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED OR USED WITH OUR PRODUCTS AND ANY FAILURE TO MAINTAIN THE CONFIDENTIALITY OF DATA STORED ON THE PRODUCT. THE FOREGOING LIMITATION SHALL NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS. WE DISCLAIM ANY REPRESENTATION THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS WARRANTY OR MAKE A PRODUCT EXCHANGE WITHOUT RISK TO OR LOSS OF THE PROGRAMS OR DATA.